
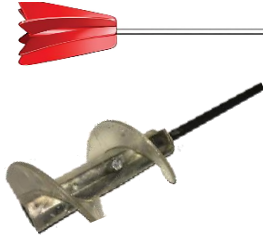




QUICK START INSTALLATION GUIDE – PAIL PRODUCTS

IF YOU READ ONLY ONE PAGE, READ THIS!

These are the quick steps. Complete details and reference documents can be found at fasscrete.com.

			
<p>11 lb. Fasscrete Pail Contains Dry Mix Bag and Activator Jar</p>	<p>Urethane Auger or Helix Mixer</p>	<p>Battery-Powered Mixing Drill</p>	<p>Magnesium Float, Margin Trowel, and Stucco Sponge</p>

CONSIDERATIONS PRIOR TO MIXING FASCRETE IN A PAIL

- Use proper safety equipment (goggles, gloves, mask).
- Prepare your installation site(s) before mixing. For best results, place and finish immediately after mixing.
- Test all tools to ensure they are operating properly before getting started.

STEPS FOR MIXING FASCRETE IN A PAIL

1. Prepare site to dry, clean, sound substrate and reinforcing steel, with no loose scale or oils.
2. Remove Fascrete Activator JAR and shake well. Carefully remove Dry Mix BAG from the pail.
 - a. First, pour entire Fascrete Activator JAR into the pail.
 - b. Next, pour entire Fascrete Dry Mix BAG into the pail.
3. Place the Fascrete Small Mixing Paddle or similar into the liquid activator. Slowly power up the 3/8" drive, min. 18V portable mixing drill on the low speed setting, for approximately 2 minutes, until the material is completely wetted out. *The material will reach a putty like consistency when it is ready to be applied.*
4. Once the material is fully mixed, you are ready to begin applying Fascrete to your repair.
 - When dealing with a vertical repair, apply a small layer of Fascrete as a scrub coat, and then begin hand packing. Finish material off with a trowel for best results.
 - When dealing with a horizontal repair, Pour material into your suitably prepared or formed site and finish with a trowel against the substrate for best bond.
5. Finish using a steel Margin Trowel or Float. Pop on the top of the material with the trowel to get the best finish. The material can also be cut before curing using the edge of a trowel. Using a moist stucco sponge as a final finish will expose aggregates on the surface.
6. Bring Water: When done, clean up tools and pail with water. Wash hands with soap and water.

[Visit fasscrete.com to read our installation guides and watch our videos](http://fasscrete.com)